

January 10, 2017

Installation Instructions for Roadway_V8i.zip (Roadway workspace for users in the Roadway Group)
(Note: Microstation V8i needs to be installed and functioning)

- 1) Download ADOT_V8i.zip first open and copy ADOT_V8i to C:\ (or other drive letter) from <http://www.azdot.gov/business/engineering-and-construction/CADD>
- 2) Download roadway_v8i.zip open and copy ADOT_V8i to C:\ (or other drive letter)
Merge with the current folder
- 3) Under the ADOT_V8i\Roadway\ folder, create a "Users" sub-folder
(ex. C:\ADOT_V8i\Roadway\Users\)
- 4) Create a username sub-folder under the Users folder you created in step 3.
Use your User name login (ex. C:\ADOT_V8i\Roadway\Users\01428\)
- 5) Copy the roadway.ucf file from the C:\ADOT_V8i\Roadway\Dev_V8i\config\ folder and paste in the C:\ProgramData\Bentley\MicroStation V8i (SELECTseries)\WorkSpace\Users\ folder.
- 6) Open the roadway.ucf file you copied in step 5, and make sure the path for ADOT_ROOT= is set to the appropriate drive letter (i.e. ADOT_ROOT=C:\ADOT_V8i/ or other drive letter)
- 7) Download help.zip open and copy ADOT_V8i to C:\ (or other drive letter)
Merge with the current folders and Copy and Replace files
- 8) Start MicroStation.
Select roadway under User: (right side near the bottom of the Open file dialog box).